Subject: Re: Speaker Plans

Posted by Wayne Parham on Wed, 17 Apr 2002 19:50:21 GMT

View Forum Message <> Reply to Message

the electro-mechanical parameters of the driver to be sure. Put the specs of the Peavey driver into PiAlign and it will tell you the dimensions required for the cabinet and port. Be sure to read the "readme.txt" file contained in the distribution, because it gives instructions for operating the program and entering driver parameters. I might also recommend that you read the PiAlign.doc whitepaper contained in the distribution archive as well.