
Subject: Re: test Pin 4, not Pin 5
Posted by [bmar](#) on Sun, 28 Apr 2002 01:46:06 GMT
[View Forum Message](#) <> [Reply to Message](#)

Pin 4 is where you have to test for 12 Vdc.pin 5 is a ground, same as SPG.Directions telling you to test B5, C5, D5 should readB4, C4, D4your transformer pic looks correct for 110vBill