

---

Subject: Tractrix Horn Loading

Posted by [Adrian Mack](#) on Mon, 07 Jul 2003 00:38:05 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Hi everyone, So many people say tractrix horns don't load properly down to their flare frequency, and that they only start properly from about an octave above the horn's flare frequency. I've done some modeling in Hornresp, and found this statement to be not always the case. I've had some times where indeed it showed on the SPL curve that it doesn't go flat down to its flare frequency at all. But I've also found some tractrix horns that DO load right down to their flare frequency, according to hornresp. The Eminence Alpha 6 in a tractrix horn with flare freq of 242Hz, 26cm<sup>2</sup> throat and 1600cm<sup>2</sup> mouth (40cm long horn) does show it flat all the way down to 242Hz, which is its flare frequency. So would it be able to be used down to its flare frequency because it's flat all the way down to that? Or should I still follow the "rule" about tractrix horns not loading down to their flare frequency? Thanks! Adrian

---