

---

Subject: Re: My speaker cracks!!

Posted by [Adveser](#) on Fri, 06 Aug 2010 05:22:12 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Sounds like the voice coil is rubbing against the cone. This happens when the glue gets overheated and melts. Try gently pushing the diaphragm, but gently!. If you hear nothing, then there is another culprit. If you hear any scratchy noises, that will pretty much confirm it. If it sounds like broken glass, then you blew out the voice coil unfortunately.

And why not take the driver out and take a look? That can't hurt anything.

If I were you I wouldn't take my word for it. I could be dead wrong. Let's see what the other people say.

---