

---

Subject: Driver Removal

Posted by [NWCgrad](#) on Tue, 25 Oct 2011 04:18:13 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

What is the best way to safely pull the woofer from the 4 Pi enclosure? The driver is flush mounted with the baffle with no room to grab the frame.

I received a soldering iron and solder from a co-worker and will repair the connector that was broken on a crossover during transnational shipping of the speaker.

---