

---

Subject: Jensen Turntable Garbled sound  
Posted by [kaitcruz](#) on Sat, 21 Jan 2012 01:49:44 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

Hi guys,

I hope you could help me. I am newbie here and also a new user of turntable, not really familiar when troubleshooting this.

I have a brand new Jensen Turntable and bought it via online but the seller don't allow to replace the unit (screw them), anyhow its working fine on the first few minutes then when in the middle of the vinyl the sound became garbled with squeaking sound and suddenly it will stop. Here's a screenshot of the Jensen Turntable unit for your reference >  
[http://img.photobucket.com/albums/v281/pyth/IMG\\_4428.jpg](http://img.photobucket.com/albums/v281/pyth/IMG_4428.jpg)

Does anyone knows how to fix this? Or better yet does anyone know any repair/service center shop here in Quezon City, Philippines? Please I beg you techie turntable people to help me.

I am looking forward to hear inputs from anyone as soon as possible! Thank you so much & God bless!

---