

---

Subject: CD writer help

Posted by [Rockstar](#) on Sat, 21 Apr 2012 20:04:28 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

I'm trying to download music onto a CD from the computer. I can't get the CD writer to work. What could I be doing wrong? It is showing that the music is transferring but when I go to play the CD, nothing is there!

---