
Subject: Re: memory presets won't hold frequency
Posted by vinyltocdr@msn.com on Tue, 25 Apr 2006 00:52:47 GMT
[View Forum Message](#) <> [Reply to Message](#)

that is very helpful. as i look at the schematic, all the memory preset switches along with the "memory" button go into IC 401. on pin fourteen of IC 401 is a 2200 mfd 6.3v capacitor. the other side of the cap goes to ground. does this sound like the one??
