

---

Subject: Re: Need Help Phonograph Problem

Posted by [sporty1000](#) on Sun, 20 Dec 2015 04:22:15 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Thanks for the help...I cant take it back, I sold it on Ebay and the buyer now has the problem. It didnt do it before it was shipped as I test played a record. Would that autostop only activate on track 1 of an lp and not on 2 and higher? Thats what is strange, as lowering the needle on track 1 makes it stop immediatly but raising it restarts the drive and lowering on track 2 plays. Strange. The autostop has to have a trigger or switch that activates it, like at the end of a record....but how would it get activated on track 1? If it was here, I would be able to fix anything replaceable or adjustable, but I have to pass the word on to the buyer and let her know if it is fixable.

---