

---

Subject: Headphones shorting out in the same place

Posted by [Lizah](#) on Fri, 10 Jun 2016 13:22:35 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

My daughter keeps going through headphones like crazy. She has them for about a month and then they start shorting out. It always seems to be in the same place, right at the end by the jack. Is there anyway to stop this from happening? I'm beginning to think that I need to buy out the headphone department the next time I go to the store!

---