Subject: Re: No sound on laptop Posted by gofar99 on Tue, 31 Jan 2017 23:10:35 GMT View Forum Message <> Reply to Message

Hi, Depending on the laptop it is probably a setting. On mine (a Toshiba) if you click on the speaker icon at the bottom of the screen it will bring up a menu that shows what device (speaker, phones etc) is being used. Just select the one you want. Alternatively you may have muted the speaker, just click the icon to undo it. Other posibilities are found in the settings section of the control panel. There are too many variations from brand to brand to give you definitve guidance there. If you tell us what model it is maybe we can help more.

Page 1 of 1 ---- Generated from AudioRoundTable.com