

---

Subject: Re: Hissing while listening to vinyl.  
Posted by [gofar99](#) on Sun, 23 Dec 2018 21:26:29 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

Hi, Most likely what you are hearing is sibilance. It can occur because of a badly manufactured LP, but more likely is caused by the cartridge/stylus. Even with the best turntables some is possible. Anyhow, it is usually an indication of miss tracking. There are several ways this can occur. The most common are: insufficient tracking force, incorrect anti skating force, cartridge not aligned correctly, worn or damaged stylus (needle). You need to check any of those things you can. What brand/model of turntable do you have? What cartridge are you using?

---