

---

Subject: Xmax unknow

Posted by [j.luis cruz](#) . on Tue, 21 Nov 2006 01:56:56 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Hy Wayne .Do you know a formula to derive the Xmax of a driver ?

---

---

Subject: Re: Xmax

Posted by [Wayne Parham](#) on Tue, 21 Nov 2006 02:10:05 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Xmax is generally considered to be voice coil length minus gap height, divided by two. It's the amount of one-way travel before the coil moves out of the gap. However, some manufacturers use a different way of finding this value. One proposal is to give an excursion figure that results in a certain THD, such as 10% or 15%.

---