
Subject: rogue 88 amp
Posted by [Jeff](#) on Tue, 26 Oct 2004 21:11:05 GMT
[View Forum Message](#) <> [Reply to Message](#)

I am new to tubes, so bear with me. I replaced the 4 KT88 tubes and the 12ax7 tubes because the right channel fails to play sound. The fuses look OK. I have not, nor do I understand how to, checked the ceramic fuses. How do I continue checking to see what is the problem Thanks!

Subject: Re: rogue 88 amp
Posted by [Wayne Parham](#) on Thu, 28 Oct 2004 15:36:14 GMT
[View Forum Message](#) <> [Reply to Message](#)

Do you have an oscilloscope, DVM or any test equipment? If so, you can trace the signal from input to output to see where it fails. If not, you might try swapping components and find it by a process of elimination. Try tubes first, capacitors second, and transformers and resistors last.

Subject: Re: rogue 88 amp
Posted by [jim](#) on Sun, 07 Nov 2004 13:39:55 GMT
[View Forum Message](#) <> [Reply to Message](#)

I have a blown output fuse in my rogue 88 (to transformer), I am unable to read the rating, the manual does not help. Any clue ?thanks

Subject: Re: rogue 88 amp
Posted by [Wayne Parham](#) on Sat, 08 Jan 2005 11:32:09 GMT
[View Forum Message](#) <> [Reply to Message](#)

Does the amp work properly? If so, I'd probably use the smallest value fuse that will work at full power without blowing. If you have a meter, you can insert it into the circuit where the fuse goes and measure the current. If not, try a relatively small value fast-blow fuse at first and work your way up to a value that doesn't blow.
