

---

Subject: erratic cycling

Posted by [rollingthunder6](#) on Thu, 01 Dec 2011 18:09:46 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

i have a BIC 960 multiple play turntable.

of late, the cycle mechanism has become erratic: sometimes at the end of a record it cycles to the next record, and sometime not. there's no discernible pattern: for any given record, sometimes it will, and sometimes it won't.

this turntable is equipped w/ tonearm counterweight, tracking force adjustment, anti-skate force adjustment, cueing rate adjustment, stylus set-down adjustment, and pickup height adjustment. will fiddling w/ any of these solve the problem, or is there something inside that i need to fiddle with? or is it simply time to buy a new turntable? any advice/suggestions will be appreciated. thank you.

---

---

Subject: Re: erratic cycling

Posted by [gofar99](#) on Thu, 01 Dec 2011 20:34:19 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Hi, Ask the question on the vinylengine forum and check the extensive data base on turntables. I suspect it just needs cleaning or lubrication.

---