

---

Subject: yamaha turntable yp-b2 on switch?  
Posted by [fredvv](#) on Sun, 18 Dec 2011 20:16:40 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

took turntable down from attic - 36 years forgot where the on button is

---

---

Subject: Re: yamaha turntable yp-b2 on switch?  
Posted by [gofar99](#) on Mon, 19 Dec 2011 16:43:59 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

Hi, I'm not familiar with that TT, but you might ask on the vinylengine forum. Also check their archives. Might do that first to avoid having anyone poke fun at you.

---

---

Subject: Re: yamaha turntable yp-b2 on switch?  
Posted by [Wayne Parham](#) on Mon, 19 Dec 2011 20:05:34 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

I don't have one of those turntables either, but I do know several that start when the tone arm is lifted and moved towards the platter. Could it be that's the way yours works too? Have you tried lifting the tone arm and moving it towards the platter?

---

---

Subject: Re: yamaha turntable yp-b2 on switch?  
Posted by [gofar99](#) on Tue, 20 Dec 2011 01:34:07 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

Hi, That is one mode that starts my Dual 701.

---