

---

Subject: DH rectifier connection

Posted by [Shane](#) on Wed, 25 Oct 2006 04:14:43 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Need some clarification please. When using a DH rectifier like a 5Y3GT, the power triodes secondary leads go to pins 4 and 6 with the PT's center tap grounded? Then the 5V filament leads go to pins 2 and 8, with the B+ connection to the first filter cap coming off of pin 8 or the B+ connection coming from the center tap of the 5V winding if it has a center tap (with the two main heater leads still at pin 2 and 8)?

---

---

Subject: Re: DH rectifier connection

Posted by [Forty2wo](#) on Fri, 27 Oct 2006 02:39:42 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Yes, you are correct. If your heater winding has a CT, you can tap your B+ from it. I use pin 8, then if I want to switch to an indirectly heated rectifier you have a direct connection to the cathode...John

---