

---

Subject: MP3 Player Hates Weezer

Posted by [Nymeria](#) on Mon, 23 Jul 2012 20:00:40 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

For some reason, my mp3 player always freezes up when playing a Weezer mp3. It'll play part of the song, then stop. I can't get it to restart or move to another track, so I turn the player off and back on and then it works again. It's so strange; it'll happen with any one of the 5 Weezer songs I have, but no other artist's songs.

---

---

Subject: Re: MP3 Player Hates Weezer

Posted by [audioaudio90](#) on Wed, 25 Jul 2012 14:44:27 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

That is really odd. Did you download all of the mp3s from the same place? It's got to be some sort of data issue within all of them if it doesn't happen with any other song. Do you notice the same issue when playing the mp3s on your computer?

---