

---

Subject: Intermittent Drop Outs

Posted by [Nymeria](#) on Mon, 25 Aug 2014 13:50:01 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Intermittent sound drops are usually the result of a loose electrical connection, right? I don't hear any buzzing or humming and the drops seem totally random. Loud noises or vibration don't seem to correlate to the dropouts, which makes me wonder. I would think a loose connection would always drop in that case.

---

---

Subject: Re: Intermittent Drop Outs

Posted by [gofar99](#) on Tue, 26 Aug 2014 02:00:43 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Hi, Drop outs in what equipment? There can be many causes depending on what the equipment is.

---

---

Subject: Re: Intermittent Drop Outs

Posted by [Nymeria](#) on Tue, 26 Aug 2014 13:50:48 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

I'm sorry for not being clearer. It's an mp3 player (which plays fine all the time) plugged into a mixer and out to stereo speakers. The right speaker drops out.

---