
Subject: Spinning slow

Posted by [Ryan](#) on Tue, 04 May 2004 16:20:22 GMT

[View Forum Message](#) <> [Reply to Message](#)

Hi all,I have Sony PS LX430 and I recently noticed that it spins slower than what it used to. Is this because of the belt is old and I need to replace that? or is it due to more complicated problem?Any help will be appreciated.Thanks.

Subject: Re: Spinning slow

Posted by [Larry](#) on Wed, 05 May 2004 18:01:11 GMT

[View Forum Message](#) <> [Reply to Message](#)

the problem may be the belt. it may also be a defective motor or something in the electronics. this model uses a motor drive ic as well as a couple of transistors to switch and adjust the two speeds. check the belt, if that's not the problem, you can send it in for repair.

Subject: Re: Spinning slow

Posted by [jake](#) on Thu, 06 May 2004 13:36:36 GMT

[View Forum Message](#) <> [Reply to Message](#)

i have a technics sl23a and the belt and motor are old. The turntable will slow down and speed up randomly and sometimes just stop.If the belt is not the problem, how can i repair the motor...because the turntable itself is from the 70's i doubt i could send it in....any radioshak solutions??thanks in advance-jake

Subject: Re: Spinning slow

Posted by [Wayne Parham](#) on Thu, 06 May 2004 21:34:13 GMT

[View Forum Message](#) <> [Reply to Message](#)

You might write to Larry directly; He may be able to help you out. Larry is with Approved Audio Service, which is one of the AudioRoundTable.com sponsors. They may be able to give you a quote or at least an estimate on repair costs.
