

---

Subject: Turntable problems

Posted by [Q](#) on Tue, 14 Dec 2004 22:23:04 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

My turntable has begun to give me problems. I'm only getting sound from one speaker - this doesn't happen when I play cds or the radio. Any thoughts on what direction I should go? Thanks in advance, QAustin

---

---

Subject: Re: Turntable problems

Posted by [Manualblock](#) on Tue, 14 Dec 2004 22:43:35 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

First swap the RCA output leads from left to right and see if the same speaker still has no sound. If the same speaker is still silent, you need to Borrow another Turntable to see if the Phono Stage in your set-up is functioning. If that doesn't change anything then the problem is most likely your phono cartridge. That will need to be replaced. Tell us how old the needle and cartridge is please.

---

---

Subject: Re: Turntable problems

Posted by [Steve B.](#) on Sun, 23 Jan 2005 18:59:36 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Thanks!!! It was not my initial posting but still, it was my turntable question. No longer a problem, your advice solved my "JVC JL-F50" problem. Thanks again!!!!

---