

---

Subject: Sony PS-LX250H Turntable, Auto mechanism problem

Posted by [bpage](#) on Mon, 28 Mar 2005 10:41:40 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Hello , i've recently bought a the PS-LX250H turntable from Sony, and the playing of records is just fine except for one problem... When pressing the "start" button to auto-play a record, the arm lifts, slides to the record, puts the stylus down normally, but 2 secs later, it picks up the stylus, and gets back into the off position and the turntable stops. What could be wrong? Thanks B. Page

---

Subject: Re: Sony PS-LX250H Turntable, Auto mechanism problem

Posted by [Manualblock](#) on Mon, 28 Mar 2005 12:07:29 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

You need to open the table and look underneath. There are two arms and a pair of gears that move the arm. When the arm stops too soon it is most likely that one of the gears is either mis-aligned or the rubber band that puts tension on the rotating gear arm is worn out. You can play with it but it probably needs someone who does this.

---

Subject: Re: Sony PS-LX250H Turntable, Auto mechanism problem

Posted by [bpage](#) on Tue, 29 Mar 2005 12:34:04 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

thanks manualblock, ill try tonight

---