

---

Subject: Sony LX250H BIG Problem  
Posted by [bpage](#) on Fri, 22 Apr 2005 06:09:10 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

Hey everyone, My Sony PS-LX250H turntable has a severe problem, well at least very annoying for auto play. When i press the "start" button, the arm moves normally up to the record, lowers the stylus, then plays it... But unusually 2-3 seconds after the stylus has touched the record, the arm just lifts back up again, gets back in its "off" position, and stops the turntable. Could anyone help? Thanks Bpage

---

---

Subject: Re: Sony LX250H BIG Problem  
Posted by [Wayne Parham](#) on Fri, 22 Apr 2005 10:07:34 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

Maybe try a different model. These hundred dollar turntables are never very reliable, and you can expect them to chew up your records as well. I suggest discarding it and getting an entry level Technics or Rega turntable at the least.

---

---

Subject: Re: Sony LX250H BIG Problem  
Posted by [Manualblock](#) on Fri, 22 Apr 2005 11:36:12 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

Maybe it doesn't like that record?

---

---

Subject: Re: Sony LX250H BIG Problem  
Posted by [bpage](#) on Sun, 08 May 2005 17:54:11 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

You're right maybe i should try with another turntable... I've tried with a lot of records but thanks for the help anyway. Thanks Bpage

---