
Subject: Sony LX250H BIG Problem
Posted by [bpage](#) on Fri, 22 Apr 2005 06:09:10 GMT
[View Forum Message](#) <> [Reply to Message](#)

Hey everyone, My Sony PS-LX250H turntable has a severe problem, well at least very annoying for auto play. When i press the "start" button, the arm moves normally up to the record, lowers the stylus, then plays it... But unusually 2-3 seconds after the stylus has touched the record, the arm just lifts back up again, gets back in its "off" position, and stops the turntable. Could anyone help? Thanks Bpage

Subject: Re: Sony LX250H BIG Problem
Posted by [Wayne Parham](#) on Fri, 22 Apr 2005 10:07:34 GMT
[View Forum Message](#) <> [Reply to Message](#)

Maybe try a different model. These hundred dollar turntables are never very reliable, and you can expect them to chew up your records as well. I suggest discarding it and getting an entry level Technics or Rega turntable at the least.

Subject: Re: Sony LX250H BIG Problem
Posted by [Manualblock](#) on Fri, 22 Apr 2005 11:36:12 GMT
[View Forum Message](#) <> [Reply to Message](#)

Maybe it doesn't like that record?

Subject: Re: Sony LX250H BIG Problem
Posted by [bpage](#) on Sun, 08 May 2005 17:54:11 GMT
[View Forum Message](#) <> [Reply to Message](#)

You're right maybe i should try with another turntable... I've tried with a lot of records but thanks for the help anyway. Thanks Bpage
