

---

Subject: why won't my turntable play clear vinyl?  
Posted by [scottyrobotty](#) on Sun, 09 Oct 2005 05:15:54 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

clear of even semi-transparent vinyl of any color. when i start it the arm will go over near the edge of the record and then it will stop and go back to it's rest. it's a sony ps-636.any clues on how i can override this safeguard? i can't find a sensor anywhere.

---

Subject: Re: why won't my turntable play clear vinyl?  
Posted by [Wayne Parham](#) on Sun, 09 Oct 2005 07:06:22 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

That's an interesting symptom. You might get the service manual and see if there is any info there. If nothing else, at least you'll have the manual.

---

Subject: Re: why won't my turntable play clear vinyl?  
Posted by [Manualblock](#) on Sun, 09 Oct 2005 12:20:55 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

The manual might be hard to find since it doesn't exist.

---

Subject: Re: why won't my turntable play clear vinyl?  
Posted by [Dominic](#) on Tue, 11 Oct 2005 20:36:31 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

try putting some black paper underneath it.

---

Subject: Re: why won't my turntable play clear vinyl?  
Posted by [Paul C.](#) on Tue, 07 Mar 2006 04:51:13 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

I think you need to color the edge of the clear LP with a green magic marker...(No, don't do this, it is a joke meant to offend gullible people)

---