

---

Subject: Sony Drive-belt replacement

Posted by [Patrick](#) on Tue, 20 Dec 2005 09:10:26 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Hi all, Can anyone advise me? I've come across an old turntable (Sony PS-LX220) with a drive belt detached. No manual with it. Any idea how to replace the belt? Do I open up the box? There's a pulley which spins when it's turned on, under the turntable itself, but as far as I can see it can't drive the turntable directly because it's not touching the side of it underneath, so it must need a belt. If anyone has an illustration from a Sony manual on how to replace a belt, that might be the best help. Or any other suggestions? Many thanks, Patrick.

---

Subject: Re: Sony Drive-belt replacement

Posted by [Patrick](#) on Thu, 22 Dec 2005 09:45:36 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Hi I've found out how to do it now - thankyou.