

---

Subject: turntable surface noise in right channel  
Posted by [daniel](#) on Wed, 01 Feb 2006 14:27:36 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

hello, I recently bought a technics SL 1200 MK2. When I play records on it, and there is any surface noise, the noise is always much louder in the right channel, often like a constant crackle, while in the left there will only be a few pops. I thought it was the old cartridge, but I got a new one (a shure cartridge) and the problem persists. any ideas as to the problem? thanks, daniel

---

---

Subject: Re: turntable surface noise in right channel  
Posted by [Wayne Parham](#) on Thu, 02 Feb 2006 14:33:09 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

Maybe check the wiring between cartridge and output jacks.

---

---

Subject: Re: turntable surface noise in right channel  
Posted by [daniel](#) on Fri, 03 Feb 2006 00:39:29 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

how can I do that? would that involve taking apart the turntable? thanks

---

---

Subject: Re: turntable surface noise in right channel  
Posted by [Wayne Parham](#) on Fri, 03 Feb 2006 19:11:26 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

Yeah, you'll have to fish the wire out through the tone arm and out the body and replace it with new wire. Do a test first - Disconnect the wires at the cartridge and run new wires externally along the tone arm, taping them to the outside. Put an RCA plug on them at the end of the tone arm and connect your preamp cables there. It will be a makeshift jury rig that will allow you to test without going through too much trouble. If the new makeshift wires sound clean, then the problem is in the wires or connections on the existing wires run inside the arm. You'll want to fish them out and replace them. But if the problem persists even after you've run external wires, you'll know that the problem isn't with the internal wires or connections.

---