

---

Subject: Elac Miracord 50 H II

Posted by [draudio2u](#) on Tue, 21 Feb 2006 18:56:29 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Greetings,I have an ELAC 50 H II that I am trying to get working correctly. The problem is the automatic drop into the play position. The arm moves into place, the release lever moves down and then two seconds later, the arm drops by weight of gravity, bouncing the needle on the LP and into the first track. Is there not a counter spring to lower the arm slowly? Anyone have advice?Thank you.

---

---

Subject: Re: Elac Miracord 50 H II

Posted by [Wayne Parham](#) on Tue, 21 Feb 2006 19:08:50 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Look for a hydraulic damper. The damper is probably shot so replace it.

---

---

Subject: Re: Elac Miracord 50 H II

Posted by [draudio2u](#) on Tue, 21 Feb 2006 19:18:04 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Would this be inside the arms center spindle? Not the sponge on which it gets lifted?

---