

---

Subject: Thorn turntable, not responsive AT ALL.  
Posted by [mabz](#) on Sat, 10 Jun 2006 07:31:20 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

i just got a secondhand turntable, and i pretty everything i think im suppose to do and it doesnt respond AT ALL, no movement, sound whatsoever. although theres this thing underneath the platter that says "turn" and when you turn it, this small spindle-like thing at the bottom left corner starts to spin. and when u turn it back to its original position it stops. im not sure if this has any significance but PLEASE HELP!!

---

---

Subject: Re: Thorn turntable, not responsive AT ALL.  
Posted by [Tre'](#) on Sat, 10 Jun 2006 16:00:07 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

sounds like you need a drive belt.

---