
Subject: Denon DP-51F - Can't keep tonearm on platter
Posted by [Andrew Kanter](#) on Mon, 19 Jun 2006 10:02:46 GMT
[View Forum Message](#) <> [Reply to Message](#)

Can anyone help? I recently acquired a Denon DP-51F which is in excellent condition, but the tonearm glides across the platter. I've adjusted just about every knob that I can think of per the instructions and the service manual to no effect. Any ideas? Perhaps something is loose inside?

Subject: Re: Denon DP-51F - Can't keep tonearm on platter
Posted by [Wayne Parham](#) on Mon, 19 Jun 2006 13:18:22 GMT
[View Forum Message](#) <> [Reply to Message](#)

Is the needle in good shape? Turntable tone arm and cartridge setup

Subject: Re: Denon DP-51F - Can't keep tonearm on platter
Posted by [Andrew Kanter](#) on Sat, 29 Jul 2006 16:33:27 GMT
[View Forum Message](#) <> [Reply to Message](#)

It looks OK, but I'll be honest it's been so darn long since I looked closely that I can't be 100% sure. I could use recommendations on a replacement if one is needed. The cartridge is a DL-60.
