

---

Subject: Turntable problem

Posted by [Mark Despot](#) on Sat, 12 Aug 2006 11:37:47 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Can anyone help? I recently bought a Panasonic SC-HT40 home theatre system containing a receiver and 6 speakers. As well as sockets for connecting TV and DVD, it also has 2 games/aux sockets (L&R). I've also just gone and bought a Sherwood PM-9805 turntable with pre-amp. I was told that I could connect the two outgoing ports (L&R) on the turntable to the games/aux sockets on the receiver ... that's why I bought it. I can successfully connect the TV, a DVD player and a VCR to the receiver, and the sound is great. However, when I connect the turntable, the sound is extremely faint ... even at full volume. I've checked the turntable arm, the weights, the balance, the connections, etc. etc. but so far no success. I've also contacted three credible hi-fi dealers around town and they all claim it should work (ie. the sound should be better than I'm getting). Has anyone out there had any experience connecting a pre-amp turntable to an aux port on a receiver?

---

---

Subject: Re: Turntable problem

Posted by [Manualblock](#) on Sat, 12 Aug 2006 14:57:57 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Doesn't sound like the pre-amp is working. Can you try the pre-amp Table into another reciever and if you get the same low volume then you know it is the pre.

---

---

Subject: Re: Turntable problem

Posted by [Wayne Parham](#) on Mon, 14 Aug 2006 21:10:04 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

I think he just needs a phono stage.

---

---

Subject: Re: Turntable problem

Posted by [Manualblock](#) on Mon, 14 Aug 2006 21:39:43 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Sorry; I thought he said he had a phono stage in the first part of the post.

---