

---

Subject: turntable adjustment

Posted by [Joshua Beecham](#) on Tue, 17 Oct 2006 11:56:39 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Hey everyone, I am a novice to turntables, but I am trying to learn. I have an old Garrard model 440M multiplay unit that I am trying to "tune up," and I have a couple of basic questions maybe someone could answer for me or point me to a good resource that can. 1) What is the purpose of the 2 big screws, one on the top left and one on the lower right side of the platform that the platter sits on (other than to mount the table to the wooden frame). I noticed that if you turn them all the way to the left they tighten the table down rigid, and if you turn them all the way to the right they allow the table to bounce freely. Are these to be tightened down when you transport the unit, or is their adjustability for some other purpose? 2) I downloaded some information from the web regarding leveling the unit and adjusting the tracking force, but I don't understand what adjustment knobs it is referring to. The arm has a counter weight at the back of it, but it doesn't appear to be adjustable itself. But there are 2 other places where it appears adjustments can be made. There is a sliding lever just to the right and at the back of the arm that has numbers from 1-3 on the left side and 1-5 on the right side. What is that for? There is also a round adjustment knob on the underside of the arm that moves a marker when you turn it, which moves the marker along a scale of 7 vertical slash marks. What is that for? More importantly, where are those to be set at? I'm sure this all seems too basic to be asking on a forum in which many of you are probably experts, but I didn't know where else to look for the information. Thanks for any help any of you can give, Josh

---

Subject: Re: turntable adjustment

Posted by [Wayne Parham](#) on Tue, 17 Oct 2006 14:45:37 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

The screws you are talking about that tighten the platter down are only used for shipping. When loose, the suspension works and decouples the platter from the feet. That's the way it is supposed to be during use. As for tracking adjustment and cartridge setup, see the link below: [Turntable tone arm and cartridge setup](#)

---