

---

Subject: Technics 1200s audio from 1 channel only  
Posted by [Shortkut77](#) on Sun, 22 Oct 2006 13:51:42 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

Hey, Can anyone tell me how to safely fix my turntable if audio is only coming out of the left channel? I think the wiring on the turntable itself disconnected. Thanks.

---

---

Subject: Re: Technics 1200s audio from 1 channel only  
Posted by [Wayne Parham](#) on Sun, 22 Oct 2006 16:08:22 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

Check the connection to the cartridge, and check that there is continuity to the RCA plugs. I'm sure that's it.

---

---

Subject: Re: Technics 1200s audio from 1 channel only  
Posted by [Shortkut77](#) on Sun, 22 Oct 2006 19:18:19 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

thanks for answering. turns out one of my speakers is shot. time for new ones (and better ones). appreciate the effort though-shortkut77

---