

---

Subject: record distortion on edge tracks

Posted by [angie](#) on Wed, 03 Jan 2007 22:46:45 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

I picked up an old Citizen record player a while back; it came with a needle that worked OK for a bit. Now, when I play records, the sound distorts on the outside tracks (the record slows down and stops revolving), but it still works fine on the tracks closer to the center. I thought it might be the condition of the used records, but the same thing happened with a brand new record. I bought a new stylus, and the same thing happens! But! I've found that the thicker records play perfectly. I tried stacking a thinner record that distorts on top of a thicker one, and that seems to work, but I'm guessing that's not good for my records. Anybody know what I can do to fix this?

---

---

Subject: Re: record distortion on edge tracks

Posted by [Wayne Parham](#) on Thu, 04 Jan 2007 18:42:26 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Here are some links about turntable adjustment. Not sure if these will apply to your turntable or not. Groovy Links

---