

---

Subject: Sony LX250H turntable

Posted by [marie riley](#) on Sun, 04 Feb 2007 22:55:03 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

The turntable suddenly will not turn. It is a year old and infrequently used. We took off the actual turntable and replaced the rubber band as instructed, but it still won't turn. What troubleshooting should we try?

---

---

Subject: Re: Sony LX250H turntable

Posted by [Wayne Parham](#) on Mon, 05 Feb 2007 18:21:00 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Is the motor turning?

---