

---

Subject: belt for Sony PS-LX250H  
Posted by [ssmriga](#) on Mon, 09 Jul 2007 00:06:45 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

I own a Sony PS-LX250H which is a belt-drive turntable. The belt has come undone and I would like to rethread it. I have downloaded the users manual but there is no map available. Also, no luck searching the internet. Can anyone help? The best would be for someone that owns the same model to take a picture of the belt setup and email it to me so that I can use it as a guide. Thanks for the help!

---

---

Subject: Re: belt for Sony PS-LX250H  
Posted by [Wayne Parham](#) on Tue, 10 Jul 2007 15:55:16 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

Doesn't the platter have holes to access the belt? Look under the pad and see if there are holes in the platter.

---