

---

Subject: sony ps-lx350h question

Posted by [adam stern](#) on Fri, 28 Sep 2007 01:28:41 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

hello, i'm desperately seeking answers or possible solutions to why my turntable plays fine but only about half as loud as another, in other words, i set the volume on tuner to say "3" with one turntable, then when i attach the sony 350h it is just maybe half as loud? any help appreciated, thanks Adam

---

Subject: Re: sony ps-lx350h question

Posted by [Wayne Parham](#) on Fri, 28 Sep 2007 13:46:15 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Sounds like the cartridges have different output levels. You might need a phono stage.  
Phono Stage posts

---