

---

Subject: Turntable Trouble

Posted by [lauren](#) on Thu, 27 Dec 2007 23:22:27 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

I just got a new turntable, a Crosley and it wont start turning, when I turn the tone arm to the right, nothing happens, and it does so far, we are afraid to break it. Customer support has been no help, and I was wandering if anyone had some ideas?

---

---

Subject: Re: Turntable Trouble

Posted by [real\\_one](#) on Fri, 28 Dec 2007 17:09:53 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Take it back. Have them replace it with one that works. If it's brand new, you shouldn't have to fix it. That's what warranties are for.

---