

---

Subject: CROSLEY KEEPSAKE TURNTABLE STOPPED SPINNING

Posted by [BETTY](#) on Tue, 03 Jun 2008 11:38:03 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

I'VE HAD MY RECORD PLAYER FOR 5 MONTHS NOW, I USE IT DAILY, WHEN I WENT TO LISTEN TO A RECORD EARLIER IT WOULD NOT WORK. THE MOTOR IS NOT MOVING, THERE IS NO SOUND WHEN I RUB THE NEEDLE, THE BELT IS NOT LOOSE OR BROKEN, WHAT COULD BE THE PROBLEM? IT WAS WORKING FINE YESTERDAY..

---

---

Subject: Re: CROSLEY KEEPSAKE TURNTABLE STOPPED SPINNING

Posted by [Renois](#) on Tue, 03 Jun 2008 21:18:24 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

I think your motor or switch must be bad. Is it covered by warrantee?Best,Renois

---

---

Subject: Re: CROSLEY KEEPSAKE TURNTABLE STOPPED SPINNING

Posted by [BETTY](#) on Wed, 04 Jun 2008 00:26:08 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

I purchased it brand new on Ebay, No warranty.

---

---

Subject: Re: CROSLEY KEEPSAKE TURNTABLE STOPPED SPINNING

Posted by [majick47](#) on Sat, 02 Jan 2010 03:07:13 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

It's a Crosley! Time to get a real turntable.

---

---

Subject: Re: CROSLEY KEEPSAKE TURNTABLE STOPPED SPINNING

Posted by [AudioAJ](#) on Mon, 15 Feb 2010 14:19:07 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Unfortunately you're probably out the money you spent. Crosley doesn't have the best reputation. The biggest complaint I've heard about them is that their playing speed is inconsistent. Time to get a new turntable. Sorry

---