

---

Subject: JVC L-A11 anti-skating  
Posted by [mikesloane](#) on Mon, 07 Jul 2008 00:53:06 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

I was given the above turntable, and it seems to work fine, but I don't know how to adjust the anti-skating knob. Since I didn't get a manual with the unit, I wonder if anyone can give me some guidance.

---

Subject: Re: JVC L-A11 anti-skating  
Posted by [Wayne Parham](#) on Thu, 17 Jul 2008 17:03:26 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

Usually anti-skating is set the same as the tracking weight, but not always. The simple no-guage eyeball method is to look at the stylus as it tracks a record and set the anti-skate where the needle is centered, i.e. not deflected left or right. Check through the posts on setup for more information.