

---

Subject: turntable loads lp, tonearm wont travel to 33 lp, all others ok  
Posted by [beached](#) on Thu, 04 Sep 2008 11:05:39 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

My Sony tonearm wont travel to the 33 lp, just goes up & back down on holder. If the loading arm is up & over, it works fine, but when in the load position, it drops the record fine, but will not travel to start of record groove. Works perfect for 45 & 78. Any ideas? I dont feel any resistance to it as in anything binding in the gears. Bob

---