
Subject: 3/8" Onkyo tweeter phase plug removal
Posted by [Jeffery L](#) on Sun, 30 Dec 2007 23:06:15 GMT
[View Forum Message](#) <> [Reply to Message](#)

What happens when I remove the phase plug from my 3/8" Onkyo tweeter? How does this affect the sound?

Subject: Re: 3/8" Onkyo tweeter phase plug removal
Posted by [real_one](#) on Mon, 31 Dec 2007 15:10:30 GMT
[View Forum Message](#) <> [Reply to Message](#)

The highest frequencies will go away if you remove the phase plug. Its purpose is to prevent cancellation.
