

---

Subject: Ward Airline

Posted by [Tricia](#) on Thu, 23 Oct 2008 20:51:58 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

I think mine is a 50s version. The turntable turns, but no sound comes out. I'd like to get rid of it but have no idea how. Any ideas?

---