

---

Subject: Lenco 35

Posted by [James@sideways-on.freeseer](#) on Mon, 20 Dec 2004 10:44:10 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Excuse my total ignorance! I've just bought a Lenco 35, and the turntable will only turn when the volume knob is switched to zero (rather than -/+). Any ideas what the problem could be?

---

---

Subject: Re: Lenco 35

Posted by [Manualblock](#) on Mon, 20 Dec 2004 13:06:29 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

The unit is probably reverse wired. Has someone worked on it in the past?

---

---

Subject: Re: Lenco 35

Posted by [James@sideways-on.freeseer](#) on Mon, 20 Dec 2004 14:14:21 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Well, it's all set in a home-made wooden base, so I assume whoever owned it before worked on the whole thing. Excusing the ignorance again, what does 'reverse wired' mean, and could I easily make it normal again?

---

---

Subject: Re: Lenco 35

Posted by [Manualblock](#) on Mon, 20 Dec 2004 21:01:09 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Wait a minute; excuse my ignorance, I read through your post so quickly that what you said escaped me. You claim that you turned the volume nob to zero? I assumed you said the start control to zero. What exactly does the volume nob control? Is this a console set? Thank you J.R.

---

---

Subject: Re: Lenco 35

Posted by [James@sideways-on.freeseer](#) on Mon, 20 Dec 2004 21:32:11 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Thanks for your replies, JR. I had a look at the wiring and discovered a loose one dangling by the volume control - so should just be a matter of attaching that - pristine condition otherwise and a beautiful machine.Jim

---