Subject: Crate Vintage 30 guitaramp Posted by Staffan on Tue, 23 Sep 2008 22:38:32 GMT View Forum Message <> Reply to Message

Hi ! I have a Crate Vintage 30 amp which suddenly stops to work after fifteen or twenty minutes . In the soundchain except the couplingcaps there are some electronic switches . (small parts with four legs) They are activated by the channelswitch and driven by a +/- 10VDC voltage.Guess the problem has something to do with heat.....? If I plug in a shorted plug in the footswitchhole I think the amp works at least a little longer an hour or so, just now I don't remember exactly. Thanks for some advice Staffan

```
Page 1 of 1 ---- Generated from AudioRoundTable.com
```