

---

Subject: Video Toaster V3

Posted by [Art Tra Studio](#) on Mon, 23 Aug 2004 01:33:57 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

First post here. I'm loading video from my Sony cam and it seems like it is taking up too much disk space. Is this normal? I thought 120Gb would hold one hour of digital video. Can anyone explain this to me? Do I have a wrong setting or something?

<http://www.newtek.com/products/vt/live/index.html>

---

---

Subject: Re: Video Toaster V3

Posted by [AntKing](#) on Wed, 25 Aug 2004 04:03:04 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Any of the uncompressed formats give you a file size of about 80Gb per hour. If you go DV, you'll drop it down under 15Gb. DV Video should be an option in your capture preferences of the Toaster, which defaults to 720x480.

---