

---

Subject: PS schematic

Posted by [Damir](#) on Fri, 21 Jan 2005 12:35:31 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Unfortunately, I don't have a symbol for the double diode in my software...Hosted by "ImageShack", link:<http://img137.exs.cx/img137/9593/ps3wu.jpg>

---

---

Subject: You're my hero

Posted by [colinhester](#) on Fri, 21 Jan 2005 16:19:03 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Thanks again.....Colin

---

---

Subject: You`re too kind :-) /nt/

Posted by [Damir](#) on Fri, 21 Jan 2005 18:49:26 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

nt

---

---

Subject: 5V4G - Pen 1

Posted by [colinhester](#) on Fri, 21 Jan 2005 20:03:34 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Is Pen 1 a shield or ground?

<http://tdsl.duncanamps.com/show.php?des=5V4G>

---

---

Subject: Re: 5V4G - Pin 1

Posted by [Damir](#) on Fri, 21 Jan 2005 21:09:23 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Metal "case", in metal version. In glass versions, 5V4G ("ST", or "shoulder" glass type) and 5V4GA ("tubular" glass type) this pin is not connected. Note that the DC "output", pin 8 - cathode,

is shared with the heater.

---