

---

Subject: Question about Audiophile series  
Posted by [imahawki](#) on Wed, 05 Oct 2005 17:44:55 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

OK, so looking at pics and the designs, is it accurate that the 10" mid and the tweeter are left open in the back. I mean, especially looking at the plans it appears as if the woofer front mounts into the horn flare and then the back side of it is just open. Is it the same with the tweeter? Does anyone have pics of Audiophile 7s finished?

---

Subject: Re: Question about Audiophile series  
Posted by [imahawki](#) on Wed, 05 Oct 2005 17:50:36 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

In this picture ([http://www.pispeakers.com/Audiophile\\_Seven\\_Pi.jpg](http://www.pispeakers.com/Audiophile_Seven_Pi.jpg)) the only thing visible is the midrange and the tweeter. Where is the woofer?

---

Subject: Re: Question about Audiophile series  
Posted by [GarMan](#) on Wed, 05 Oct 2005 20:20:01 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

The woofer fires into the corner. It's in the cabinet below the mid-horn and tweeter.

---

Subject: Re: Answers about Audiophile series  
Posted by [Wayne Parham](#) on Wed, 05 Oct 2005 22:27:56 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

The bass bin is the box below the midhorn. The woofer faces the corner and sound emits from openings in the sides. In addition to the information in the plans, here are a couple of posts that  
  
cornerhorn